





Mobile Shower Commode Chairs

Raz-AP600 (Z160)

Raz-SP600 (Z260)

User and Dealer Manual

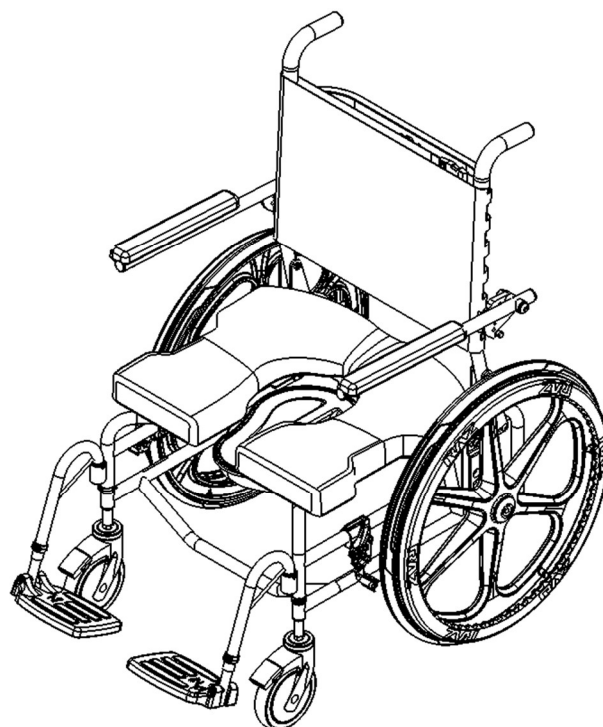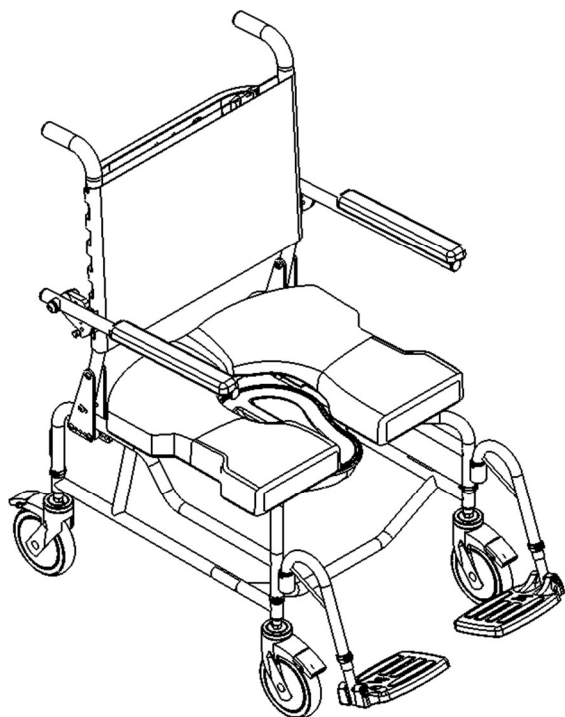

EC REP	Advena Ltd. Tower Business Center 2nd Flr, Tower Street Swatar, BKR 4013 Malta
UKRP	Advena Ltd. Pure Offices, Plato Close Warwick, CV34 6WE UK
CH REP	Senectovia Medizinaltechnik AG In der Luberzen 1, 8902 Urdorf, Switzerland



BASIC UDI-DI: 628758RAZDESIGNINC2004V9

SAFETY PRECAUTIONS

Failure to comply may cause injury or damage!

It is important that the Raz Mobile Shower Commode Chair be properly assembled and that all adjustments be made carefully. Please ensure that the user(s), dealer(s), and attendant(s) have read this manual and thoroughly understood the safe operation of the Raz Mobile Shower Commode Chair. Up-to-date manuals are available online at www.razdesigninc.com. For clarification of any section of this manual, contact your distributor or the manufacturer.

Any unauthorized modification/alteration, or misuse of Raz Shower Commode Chairs and accessories is strictly prohibited. Such actions will immediately void any applicable warranty and may result in serious injury, device malfunction, or regulatory non-compliance. Raz Design assumes no liability for any damages, losses, or expenses arising from the use of an unauthorized modified/alter device. The user assumes all responsibility for ensuring the device is used as intended and specified in the official documentation.



MANUFACTURER

Raz Design Inc.
135 Railside Rd. Toronto, ON, Canada, M3A 1B7
877.720.5678 / +1.416.751.5678
info@razdesigninc.com



CHAIR CLASSIFICATION BASED ON MAXIMUM USER WEIGHT

AP600 / SP600

275 kg (605 lbs)

SAFETY WARNINGS TO CONSIDER FOR USER PURPOSES

THIS DEVICE IS SUITABLE FOR TYPE A; HIGH USAGE (e.g. INSTITUTIONS) AND SHOULD NEVER BE USED FOR ANY PURPOSE OTHER THAN ORIGINALLY INTENDED

Stability

The casters on all models are equipped with dual-locks. The step-on lever activates both the roll lock and the swivel lock. ***It is essential that all casters on the shower chair be in an outward position before engaging the locks, for optimal forward, rearward, and lateral stability.*** If so equipped, disengage the optional directional caster lock before rotating the rear caster to the rearward position and applying the caster's dual-locks.



USERS MUST NOT lean forward while sitting in the Raz Shower Chair as this may cause the chair to tip forward.

USERS MUST NOT wheel down a ramp without an attendant who can hold onto the chair during the descent.

CASTER LOCKS ARE NOT BRAKES! Never use caster locks to slow down the shower chair when descending inclines as this could cause the chair to tip in the direction of travel.

Lateral Stability

USERS MUST NOT lean over the edge of a Raz Shower Chair as this could cause the chair to tip.

USERS MUST NOT attempt to pick up objects from the floor by leaning over and reaching – use a reacher or ask for assistance from an attendant.

USERS MUST NOT position the Raz Shower Chair on a side slope as this could cause it to tip.

Rearward Stability

USERS MUST NOT wheel up an incline on an SP600 without ensuring the optional rear anti-tippers are in place. The optional anti-tippers must be ordered with the Raz-SP600 and properly installed before wheeling on uneven surfaces.

Anti-Tippers – SP600



Anti-tippers are an option for the Raz-SP600. These are recommended whenever the chairs are to be used on uneven surfaces such as ramps or sloped floors, when used by lower-limb amputees, when the rear wheels are moved forward from the factory-set position, or for any situations when rearward stability is compromised.

Ramps and Other Inclines

Ramps and other surfaces that are not level (such as slopes into wheel-in showers) must be tested with an attendant to ensure they don't compromise the chair's stability. A qualified healthcare professional should be consulted to assist with this process.

DO NOT push or pull the Raz-AP600 up or down an incline or ramp that exceeds a 1:12 grade (5° slope).

DO NOT allow any user to be propelled (pushed or pulled) in a Raz-AP600 Shower Chair in any other manner than by an attendant.

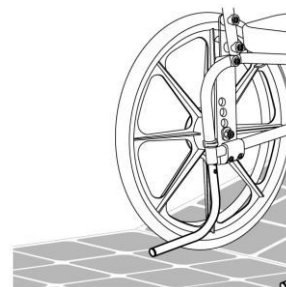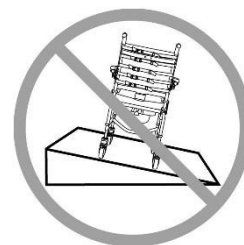

IMPORTANT !

THE REARWARD STABILITY OF THE RAZ-SP600 IS AFFECTED BY THE MOUNTING LOCATION OF THE REAR WHEELS, THE PHYSICAL AND CLINICAL CHARACTERISTICS OF THE USER, AND THE ANGLE OF THE BACK SUPPORT. THE NEED FOR ANTI-TIPPERS SHOULD HAVE BEEN DETERMINED AT THE TIME OF THE PRESCRIPTION OF THE RAZ-SP600 WITH CONSIDERATION OF THE USER'S PHYSICAL ATTRIBUTES AND ENVIRONMENT. ANTI-TIPPERS MAY BE ORDERED AS A RETROFIT AT ANY TIME IF IT IS DETERMINED THAT THEY ARE REQUIRED.

Immersion

The Raz Mobile Shower Commode Chair is not designed to be used as a pool chair. Do not immerse the shower chair in water or any other liquid, whole or in part. Immersion may result in damage to the shower chair.



Chlorine Exposure

Suitable for use in wet areas, but not pools and similarly corrosive environments.

DO NOT store the device near pools because chlorine in the air can cause rust in some of the chair's stainless steel components.

Transfers

The most dangerous part of using any shower chair is the transfer. Since every chair has different stability characteristics, it is essential to carefully review and test the transfer technique to ensure the procedure is safe. Test transfers should be performed with an attendant who can prevent the chair from tipping or moving during the transfer. If you feel that the transfers cannot be repeatedly performed safely, contact a healthcare professional who is familiar with transfer techniques and options. Individuals who have not learned safe transfer skills must seek assistance during transfers and may require a mechanical lift.

Transferring onto a Raz-AP600

ALWAYS lock all four casters with the front casters in the forward position for maximum chair stability.


Transferring onto a Raz-SP600

ALWAYS lock both front casters positioned forward and fully apply both wheel locks to securely engage the rear wheels.



The wheel locks are designed to prevent the self-propelling wheels from rotating. The dual-locks on the casters are designed to prevent the casters from rotating and the caster forks from swiveling. Caster locks and wheel locks **DO NOT and CANNOT** prevent the shower chair from sliding/moving if the floor is slippery. A slippery floor can be caused by dust, water, soap or any substance that does not allow the casters/rear wheels to grip the floor securely.


Transfers should never be attempted with the shower chair positioned on slippery surfaces. It is recommended that transfers be performed on clean, dry, non-slippery surfaces. Hard surface flooring such as tile, wood, or concrete may not provide sufficient grip to keep locked casters and/or rear wheels from sliding. A fully carpeted surface is optimal. Be aware that area rugs and shower mats can slide on floors and thereby present a hazardous surface.

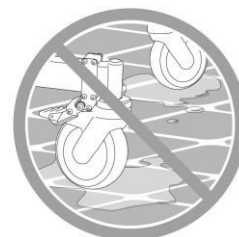

DO NOT stand on any part of the frame of the Raz Mobile Shower Commode Chair.

NEVER use the footplates to assist in transfers. This could cause the chair to tip. The foot supports should be swung to the side or removed entirely during transfers to provide unobstructed access to the shower chair.

The Raz Mobile Shower Commode Chair **is NOT** intended for use as a transportation device or a long-term seating system.

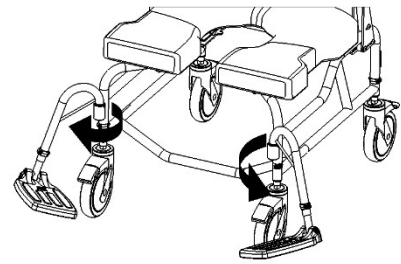

IMPORTANT !

USERS SHOULD NEVER BE LEFT UNATTENDED IN A RAZ MOBILE SHOWER COMMODE CHAIR.


IMPORTANT !

DO NOT LIFT A RAZ MOBILE SHOWER COMMODE CHAIR AND OCCUPANT BY THE ARM SUPPORTS OR FOOT SUPPORTS!

IMPORTANT !

ALWAYS BE SURE THAT THE SEAT IS PROPERLY INSTALLED AND LATCHED BEFORE A USER IS TRANSFERRED ONTO THE CHAIR. THE REAR SEAT ATTACHMENT BRACKETS MUST BE FULLY HOOKED UNDER THE REAR SEAT SUPPORT TUBES. THE FRONT SEAT ATTACHMENT BRACKETS MUST BE SECURELY LATCHED AROUND THE FRONT SEAT SUPPORT TUBES. BOTH FRONT AND REAR SEAT ATTACHMENT BRACKETS SHOULD BE SECURED IN PLACE BY TIGHTENING THE 8 SCREWS ON THE UNDERSIDE OF THE SEAT.

INSTRUCTIONS FOR THE PROPER REMOVAL AND INSTALLATION OF THE SEAT FOR CLEANING MUST BE PROVIDED TO THE USER AND / OR ATTENDANTS.

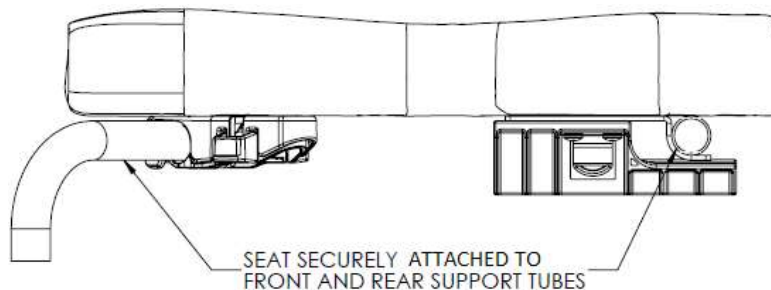

INTENDED USE STATEMENT

INDIVIDUALLY CONFIGURED, MOBILE AND STATIONARY COMMODE CHAIR FOR USE DURING SHOWERING AND TOILETING.

IMPORTANT !

THE RAZ-AP600 AND RAZ-SP600 ARE INTENDED FOR THE FOLLOWING USES:

- **AS AN AID FOR SHOWERING/BATHING, GOING TO THE TOILET, AND OTHER ACTIVITIES ASSOCIATED WITH PERSONAL CARE AND PERSONAL HYGIENE;**
- **AS A SUPPORT FOR THE BODY OF THE USER IN A SEATED OR RECLINED POSITION;**
- **WITH OR WITHOUT THE ASSISTANCE FROM A CAREGIVER;**
- **TOILETING OVER A STANDARD TOILET, OR AS A COMMODE WITH THE COMMODE PAN;**
- **IN INDOOR ENVIRONMENTS ONLY;**
- **IN BOTH TYPE A, HIGH USAGE (e.g. INSTITUTIONAL) ENVIRONMENTS AND IN-HOME ENVIRONMENTS**

THE RAZ-AP600 AND RAZ-SP600 DO NOT PERFORM ANY THERAPEUTIC OR DIAGNOSTIC FUNCTIONS, AND ARE NOT INTENDED FOR USE FOR ANY THERAPEUTIC OR DIAGNOSTIC PURPOSES. ALL PRODUCTS WITHIN THE RAZ FAMILY ARE NON-STERILE, REUSABLE, NON-INVASIVE, AND NON-IMPLANTABLE.

THE RAZ-AP600 AND RAZ-SP600 ARE INTENDED TO BE USED BY PEOPLE WITH MOBILITY IMPAIRMENTS, WHO MAY HAVE DIFFICULTY IN STANDING OR KEEPING THEIR BALANCE WHILE COMPLETING ACTIVITIES SUCH AS SHOWERING, TOILETING, OR PERSONAL HYGIENE. TYPICAL USERS HAVE LIMITED ENDURANCE AND POSTURAL CONTROL, AND MAY REQUIRE ASSISTANCE FROM A CAREGIVER FOR ACTIVITIES SUCH AS SHOWERING, TOILETING, OR PERSONAL HYGIENE. FOR PRODUCTS WITH RECLINE FUNCTION, USE OF THE RECLINE FUNCTION MAY BE CONTRA-INDICATED WHERE THE USER IS SENSITIVE TO SHEARING FORCES ON SEATED SURFACES WHEN OPENING THE SEAT-TO BACK-ANGLE.

IMPORTANT !

CONSULT A HEALTHCARE PROFESSIONAL IF YOU AS A USER EXPERIENCE DISCOMFORT, CHANGES IN MOBILITY, OR DIFFICULTY USING THE DEVICE.

LABELS OR SYMBOLS ON THE PRODUCT


PRODUCT DESIGNATION	RAZ-AP600 / RAZ-SP600
MANUFACTURER ADDRESS	 Raz Design Inc. 135 Railside Road Toronto, ON Canada M3A 1B7
AUTHORIZED REPRESENTATIVE DETAIL	EC REP UKRP CH REP
PRODUCT IDENTIFIER (PI)	SN SC-XXXXXX
UDI-DI	UDI AP600: 628758001607 SP600: 628758002604
MEDICAL DEVICE	MD
EUROPEAN CONFORMITY	CE
DATE OF MANUFACTURE	
MAXIMUM USER WEIGHT	
READ USER MANUAL	

USER & DEALER MANUAL TABLE OF CONTENTS

1.0 GENERAL INFORMATION	9
1.1 Raz-AP600/SP600 Mobile Shower Commode Chairs Overview	9
1.2 Raz-AP600/SP600 Mobile Shower Commode Chairs Specifications	9
2.0 SET-UP: INTENDED FOR DEALER USE ONLY	10
2.1 Back Support.....	10
2.1.1 Back Support Installation.....	10
2.1.2 Back Support Angle Adjustment.....	10
2.1.3 Back Support Depth Adjustment	11
2.1.4 Adjustable-Tension Back Upholstery Adjustment	11
2.2 Casters	12
2.2.1 Caster Installation	12
2.2.2 Caster Height Adjustment	12
2.3 Wheels – SP600 only	13
2.3.1 Wheel Installation with Standard Axle Bolt – SP600 only	13
2.3.2 Wheel Height Adjustment – SP600 only.....	13
2.3.3 Wheel Fore/Aft Adjustment – SP600 only	13
2.4 Wheel Lock Set-Up – SP600 only.....	14
2.5 Raz Seats.....	14
2.5.1 Seat Installation	14
2.5.2 Ischial Pelvic Alignment System (IPAS) – Adjustment.....	14
2.6 Adjustable Foot Supports	15
2.6.1 Foot Support Installation	15
2.6.2 Foot Support Adjustment.....	15
2.7 DEALER USE ONLY - Fastener Installation	15
3.0 USE AND OPERATION	16
3.1 Flip-up Arm Supports.....	16
3.2 Adjustable-Tension Back Upholstery	16
3.3 Raz Seats.....	16
3.4 Adjustable Foot Supports (Footrests)	17
3.5 Wheel Locks – SP600 only	17
3.6 Commode Pan.....	17
3.7 Casters	17
4.0 CLEANING AND MAINTENANCE	18
4.1 Cleaning After Each Use	18
4.1.1 Commode Pan	18
4.1.2 Seat	18
4.2 Cleaning As Needed.....	18
4.2.1 Adjustable-Tension Back Upholstery.....	18
4.2.2 Frame, Arm Supports, Adjustable Foot Supports, and Other Components.....	18
4.3 Suggested Cleaning Products.....	18
5.0 INCIDENT REPORTING	19
6.0 LIMITED WARRANTY	19
7.0 CONTACTS	20

1.0 GENERAL INFORMATION

1.1 Raz-AP600/SP600 Mobile Shower Commode Chairs Overview

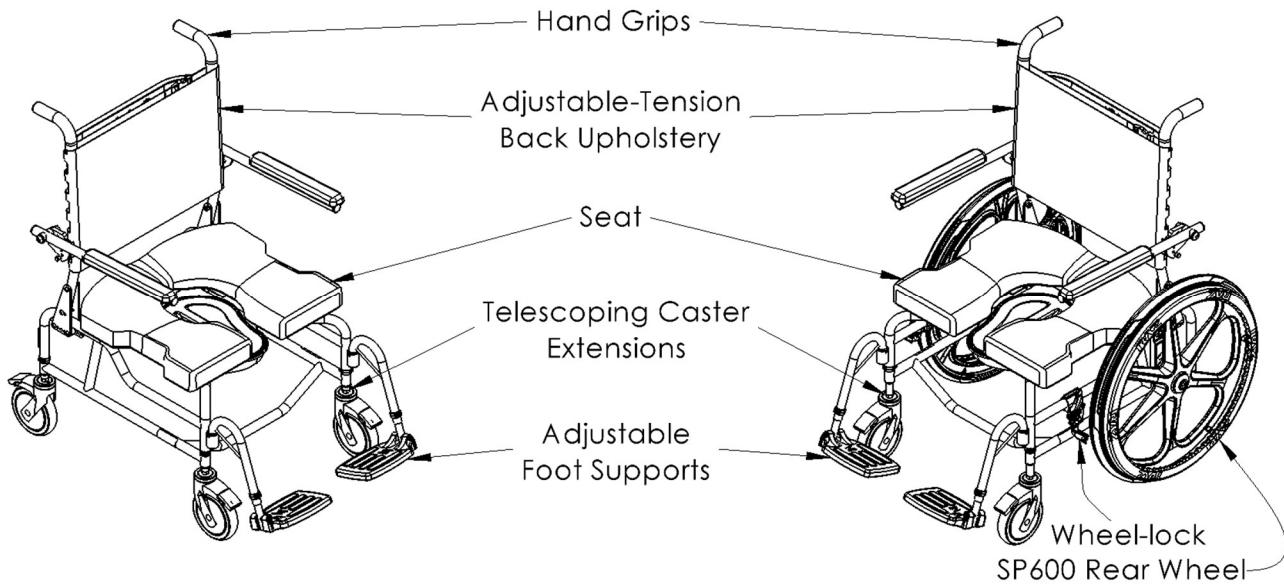

1.2 Raz-AP600/SP600 Mobile Shower Commode Chairs Specifications

SPECIFICATIONS	Raz-AP600	Raz-SP600
WEIGHT CAPACITY	275 kg (605 lbs)	275 kg (605 lbs)
FRAME WIDTH seat and back frame	56 cm (22")	56 cm (22")
OVERALL WIDTH	68 cm (26.75")	75 cm (29.5")
OVERALL LENGTH with foot supports	95 cm (37.25")	109 cm (43")
SEAT WIDTH commode seat	58 cm (23")	58 cm (23")
SEAT DEPTH front of the back post to the front of the seat	43-48 cm (17"-19")	43-48 cm (17"-19")
CLEARANCE WIDTH	41 cm (16")	41 cm (16")
CLEARANCE HEIGHT with pan brackets	5" casters: 37-47 cm (14.5"-18.5") 6" casters: 39-49 cm (15.5"-19.5")	5" casters: 37-42 cm (14.5"-16.5") 6" casters: 39-42 cm, 49 cm (15.5"-16.5", 19.5")
CLEARANCE HEIGHT without pan brackets	5" casters: 39-49 cm (15.25"-19.25") 6" casters: 41-51 cm (16.25"-20.25")	5" casters: 39-44 cm (15.25"-17.25") 6" casters: 41-44 cm, 51 cm (16.25"-17.25", 20.25")
ARM SUPPORT (ARMREST) HEIGHT ABOVE SEAT	24cm (9.5")	24cm (9.5")
SEAT-TO-FLOOR HEIGHT	5" casters: 48-58 cm (19"-23") 6" casters: 51-61 cm (20"-24") in 2.5 cm (1") increments	5" casters: 48-53 cm (19"-21") 6" casters: 51-53 cm, 61 cm (20"-21", 24") in 2.5 cm (1") increments
PRODUCT WEIGHT with foot supports	5" casters: 25 kg (54.5 lbs) 6" casters: 26.7 kg (58.5 lbs)	5" casters: 30.9 kg (68 lbs) 6" casters: 31.3kg (69 lbs)
FRAME AND HARDWARE MATERIAL	Stainless Steel (Lifetime warranty against corrosion)	
MINIMUM TURNING CIRCLE	105 cm (41.5")	163 cm (64")

2.0 SET-UP: INTENDED FOR DEALER USE ONLY

IMPORTANT NOTE:

- Apply a lubricant (liquid detergent, soap, lip balm, wax, etc.) to the threads before tightening the fasteners to reduce the possibility of cold welding.
- Do not overtighten fasteners.

IMPORTANT !

ADJUSTMENTS SHOULD NEVER BE ATTEMPTED WITH THE USER IN THE CHAIR.

2.1 Back Support

2.1.1 Back Support Installation

Tools required: 3/16" hex key, 1/2" wrench


1. Remove the shower chair from the shipping carton.
2. Lift the back support to an upright position.
3. Insert a button-head cap screw through one of the two holes in the middle of the outer back support plate.

NOTE: Select the rear hole for a 93° back support angle or the front hole for a 100° back support angle.


TIP: Temporarily position the back support upright by inserting a Phillips screwdriver through one plate and frame.

4. Fasten the other end of the screw with a nyloc nut.
5. Tighten the assembly with the hex key and wrench until the end of the screw extends 1 or 2 threads beyond the nyloc nut.
6. Repeat steps 3 to 5 for the other frame tube.

NOTE: Re-lubricate fasteners prior to tightening.

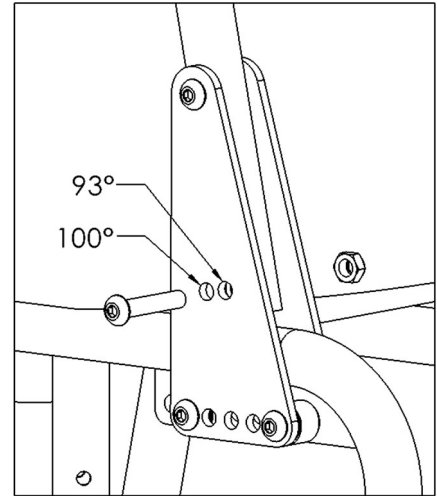

TOP VIEW OF THE BACK SUPPORT INSTALLATION

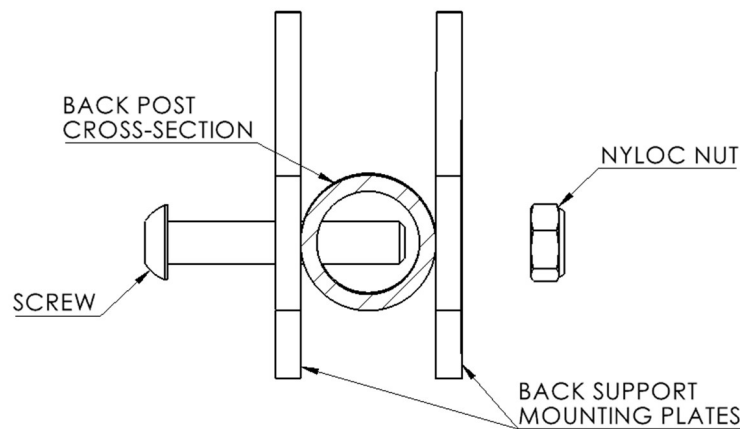


2.1.2 Back Support Angle Adjustment

Tools required: 3/16" hex key, 1/2" wrench

1. Loosen (do not remove) the locknuts on both vertical back support frame tubes.
2. Remove the lower screws and locknuts from the vertical back support frame tubes as shown in the image.
3. Rotate the back support to one of 2 positions on the back support mounting plates.

NOTE: Select the front hole for a 100° back support angle or the rear hole for a 93° back support angle.


4. With the back support in place re-insert the screws through the selected holes on the back support mounting plates.
5. Fasten the screws with locknuts.
6. Tighten the assembly with a hex key and wrench.

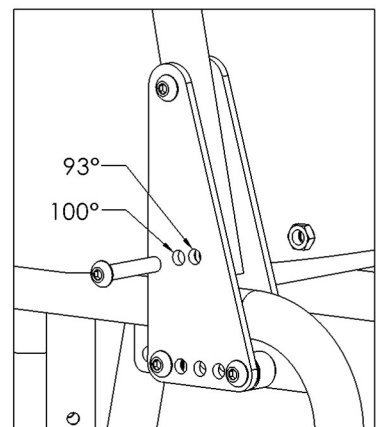


2.1.3 Back Support Depth Adjustment

Tools required: 3/16" hex key, 1/2" wrench

1. Loosen and remove the locknuts, screws, washers and spacers at the bottom of the back support mounting plates on both sides.
2. Slide the back support mounting plates to the desired seat depth.
3. Align the holes of the back support mounting plates to the holes of the seat frame.
4. With the back support in place, insert the screws into the seat frame and reinstall the washers and spacers.
5. Fasten the other end of the screws with locknuts.
6. Tighten the assembly.

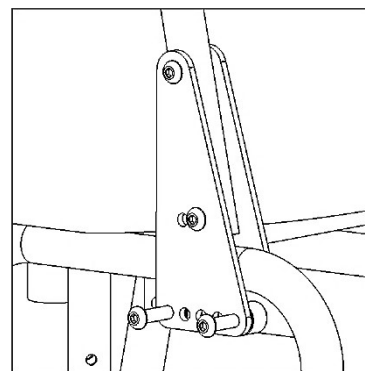


BOTTOM VIEW OF THE BACK SUPPORT INSTALLATION

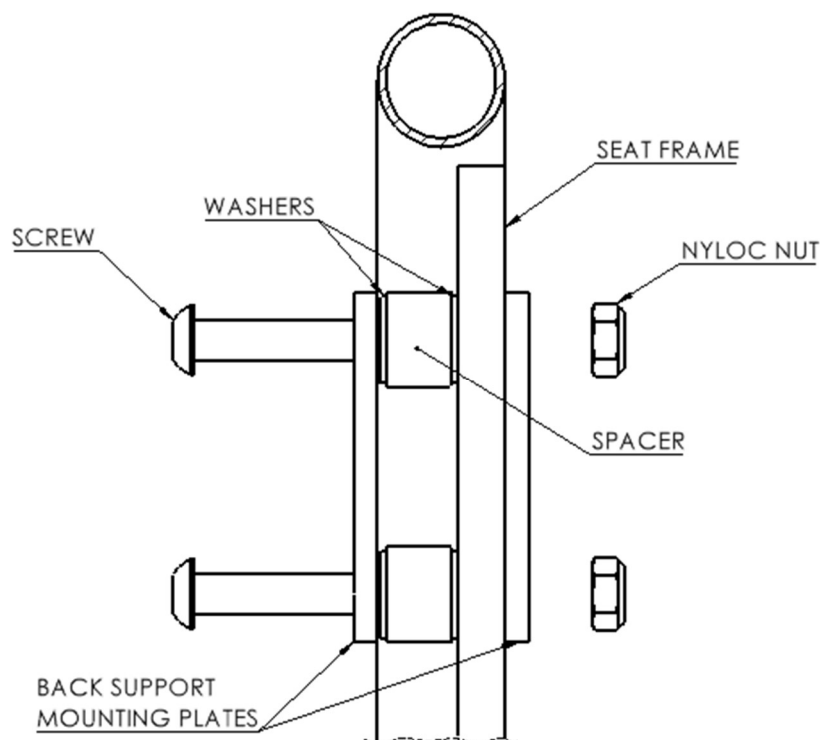

2.1.4 Adjustable-Tension Back Upholstery Adjustment

In order to adjust the back upholstery of the back support, each strap can be tightened or loosened to achieve a wide range of positions. For example, the second and third straps from the bottom can be tightened to create more pronounced support in the lumbar area of the back.

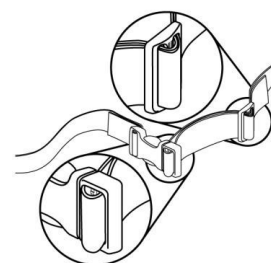

IMPORTANT !

INCREASING THE SEAT HEIGHT, MOVING THE REAR WHEELS FORWARD, AND INCREASING THE BACK SUPPORT ANGLE WILL SIGNIFICANTLY DECREASE REARWARD STABILITY. A STABILITY CHECK MUST BE PERFORMED AFTER ANY OF THESE ADJUSTMENTS ARE MADE. STABILITY CHECKS SHOULD BE PERFORMED WITH AN ATTENDANT BEHIND THE CHAIR AND WITH ANTI-TIPPERS PROPERLY INSTALLED AND ADJUSTED.

2.2 Casters

IMPORTANT !

ALL CASTER STEMS MUST BE ADJUSTED TO THE SAME HEIGHT. NEVER ATTEMPT TO CHANGE THE FRAME ANGLE BY ALTERING THE CASTER POSITION. UNEQUAL CASTER POSITIONS WILL REDUCE THE CHAIR'S STABILITY AND MAY RESULT IN TIPPING.

2.2.1 Caster Installation

For the SP600 model, casters must be installed to the height corresponding to the rear wheel height to level the chair. Refer to the below table for the initial installation of casters.


Factory Setting - Caster Extension Setting for SP600 Model	
5" Casters	Third lowest hole on caster extension tube
6" Casters	Second lowest hole on caster extension tube

1. Remove the casters from the accessory box.
2. Insert the caster extension tube into the lower frame receiver tube at the desired position.
3. Line up the hole on the frame and to the caster extension tube. Rotate the caster extension tube to line up the holes if needed.

TIP: Locking the caster first makes this easier.

4. Insert the snap-pin through the frame tube and the caster extension tube. Ensure that the pin is inserted completely through the tube and that the green plastic clip is snapped securely around the outside of the frame tube.
5. Repeat steps 2 to 4 for all casters in the assembly.

NOTE: If the directional caster lock option was ordered with the AP600 chair, one of the four casters will have the lock mounted to the caster stem. The caster with the directional lock on must be mounted facing forward in one of the rear caster positions.

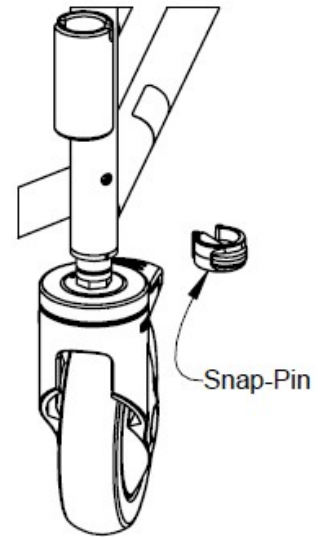

2.2.2 Caster Height Adjustment

The AP600 Model has four telescopic caster extensions providing a height adjustment range of 4". The SP600 Model has two front telescopic caster extensions with varying height adjustment range per caster sizes.

1. Remove the snap-pin holding the caster extension tube in place from the chair frame.
2. Slide the caster assembly to the desired position.
3. Align the holes in the caster extension tube with the frame holes and insert the snap-pins.

TIP: Locking the caster makes this easier.

4. Ensure that the pins are completely through the frame tube and that the green plastic clips are snapped securely around the frame tubes.
5. Repeat steps 1 to 4 for all other casters on the chair.

IMPORTANT !

THE HIGHER THE CHAIR IS ADJUSTED; THE MORE PRONE IT WILL BE TO TIPPING. CASTERS SHOULD ALWAYS BE INSTALLED AT THE LOWEST POSITION POSSIBLE WHILE MEETING THE USER'S NEEDS. ANY POSITION ABOVE THIS WILL RESULT IN A CHANGE IN THE CENTRE OF MASS, WHICH COULD CAUSE INJURY OR PRODUCT DAMAGE. IT IS HIGHLY RECOMMENDED THAT A QUALIFIED HEALTHCARE PROFESSIONAL ASSIST IN A STABILITY CHECK OF THE CHAIR IN ANY ALTERED HEIGHT CONFIGURATION.

2.3 Wheels – SP600 only

2.3.1 Wheel Installation with Standard Axle Bolt – SP600 only

Tools required: 3/4" wrench, 3/4" socket wrench


1. Remove both wheels from the shipping carton.
2. Remove the axle bolts and nyloc nuts from the carton divider.
3. Remove the hubcap from a wheel.

TIP: Use a flathead screwdriver to pry open the cap.

4. Insert the axle bolt through the wheel hub and into the axle receiver.
5. Thread the nyloc nut onto the axle bolt and tighten it until the wheel assembly is secure.

Do not over-tighten as the wheel must spin freely.

6. Reinstall the hubcap by pressing it onto the wheel hub until it clicks.
7. Repeat steps 3 to 6 for the other wheel.

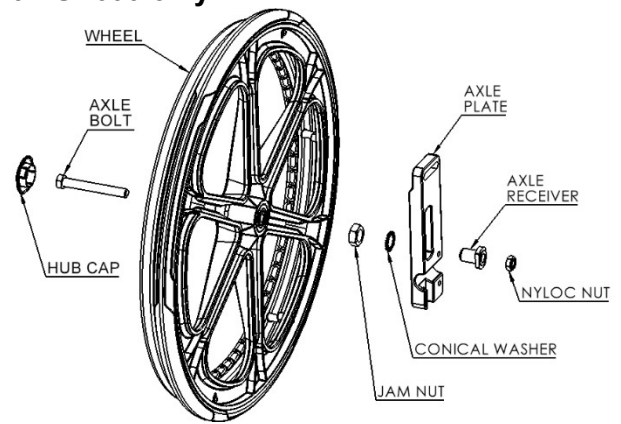

2.3.2 Wheel Height Adjustment – SP600 only


Tools required: 3/4" socket wrench, 3/4" wrench, 1 1/8" wrench

TIP: Refer to the image in the section above.

1. Remove the hubcap from the wheel by prying it open.
2. Remove the axle bolt, nyloc nut, and wheel from the axle receiver.
3. Remove the axle receiver from the axle plate.
4. Insert the axle receiver into the desired hole.

NOTE: Refer to the image on the right for available seat-to-floor height.


5. Insert the conical washer and jam nut onto the axle receiver.
6. Insert the axle bolt through the wheel hub and into the axle receiver. Thread and tighten the nyloc nut onto the axle bolt until the wheel assembly is secure. *Do not over-tighten as the wheel must spin freely.*
7. Reinstall the hubcap by pressing it onto the wheel hub until it clicks.
8. Adjust the wheel locks.
9. Repeat steps 1 to 8 for the other wheel. Pull both wheels to confirm that they are firmly in place.

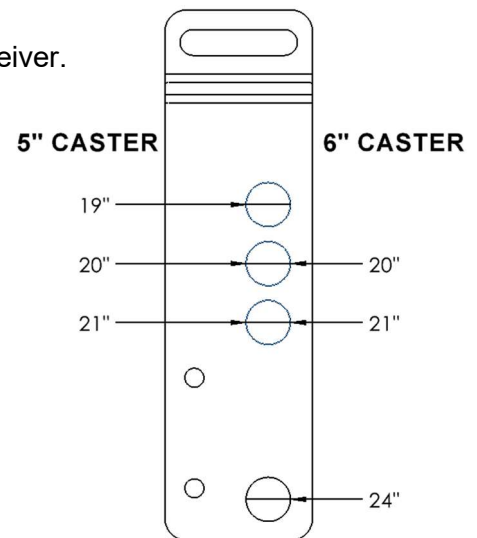

2.3.3 Wheel Fore/Aft Adjustment – SP600 only

Tools required: 3/16" hex key, (x2) 1/2" wrenches, 3/4" socket wrench, 3/4" wrench

1. Loosen the wheel locks.
 2. Remove the hubcap of one wheel by prying it open. Remove the axle bolt and locknut, and set aside the wheel assembly.
- TIP: Laying the chair on one side simplifies this procedure.*
3. With the wheel detached, loosen (do not remove) the screws on the back support mounting plate and seat frame.
 4. Loosen (do not remove) the lower axle plate clamp screws.
 5. Adjust the axle plate, noting the precise position to mirror the axle plate for the other wheel.
 6. Tighten the clamp screws on the bottom of the axle plate and the screws on the back support mounting plate and seat frame.
 7. Reinstall the wheel, axle bolt, and locknut.
 8. Tighten the axle bolt and locknut until they are secure.
 9. Reinstall the hubcap by pressing it onto the wheel hub until it clicks.
 10. Repeat steps 2 to 9 for the other wheel. Take extra care to align the wheels properly.
 11. Re-adjust the wheel locks.

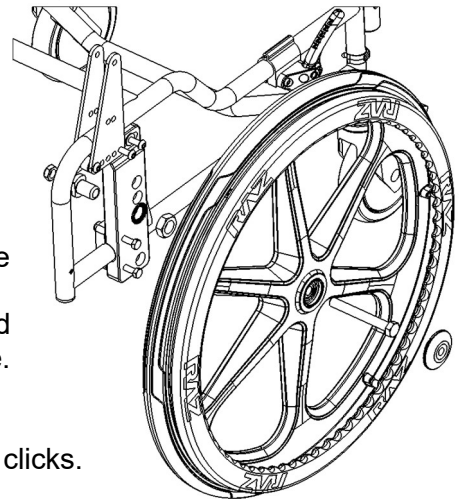

2.4 Wheel Lock Set-Up – SP600 only


The Raz wheel locks have a unique pivoting brake shoe that digs into the tire increasingly as the wheel rotation force increases. This allows the lock to engage with less force than conventional wheel locks.
Tool Required: 5mm hex key

1. Loosen (do not remove) the two clamp screws.
2. Engage the wheel lock by pushing the handle away from the wheel.
3. Slide it towards the wheel until the shoe touches the tire.
4. Disengage the wheel lock and slide it towards the wheel by 10mm.
5. Tighten the clamp screws and test the wheel lock. If needed, further adjust the wheel lock to fine-tune its position.

To test the wheel lock, rotate the wheel to confirm that the shoe rotates and digs into the tire with enough force to prevent rotation of the wheel.

DO NOT adjust such that the shoe digs into the tire with the force necessary with conventional wheel locks.


6. Repeat steps 1-5 for the other side.

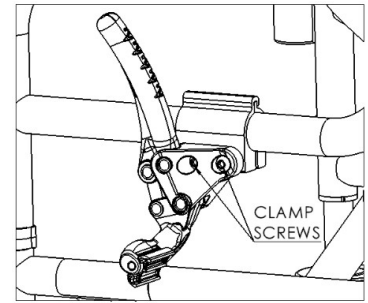

2.5 Raz Seats

2.5.1 Seat Installation

1. Ensure that the front brackets are in the open position. To open the front brackets, squeeze the tabs on the hinged portion of the bracket.
2. Slide the rear of the seat over the rear cross tube as the front of the seat is lowered onto the frame. Ensure that the rear seat brackets hook below the cross tube.
3. Continue lowering the front of the seat until the front seat brackets nestle onto the front seat support tubes.
4. Secure the seat in place by closing the front seat brackets. To close the seat bracket, squeeze the clip and close the bracket around the front support tubes.
5. Reverse steps 1 to 4 to remove the seat from the frame.

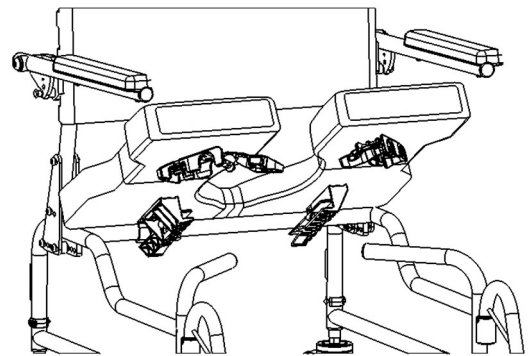


2.5.2 Ischial Pelvic Alignment System (IPAS) – Adjustment

The seat has approximately 5 cm (2") of fore/aft adjustment allowing optimal positioning of the seat aperture around the user's Ischial Tuberosities.

Tool Required: #2 Phillips screwdriver

1. Release the seat by opening the front seat brackets.
2. Lift the front of the seat and pull upward and then forward to remove the seat from the chair.
3. Loosen (*but do not remove*) the eight screws attaching the front seat brackets and rear seat brackets to the underside of the seat.

Note: For clarity, the rear seat brackets are shown below without commode pan brackets.

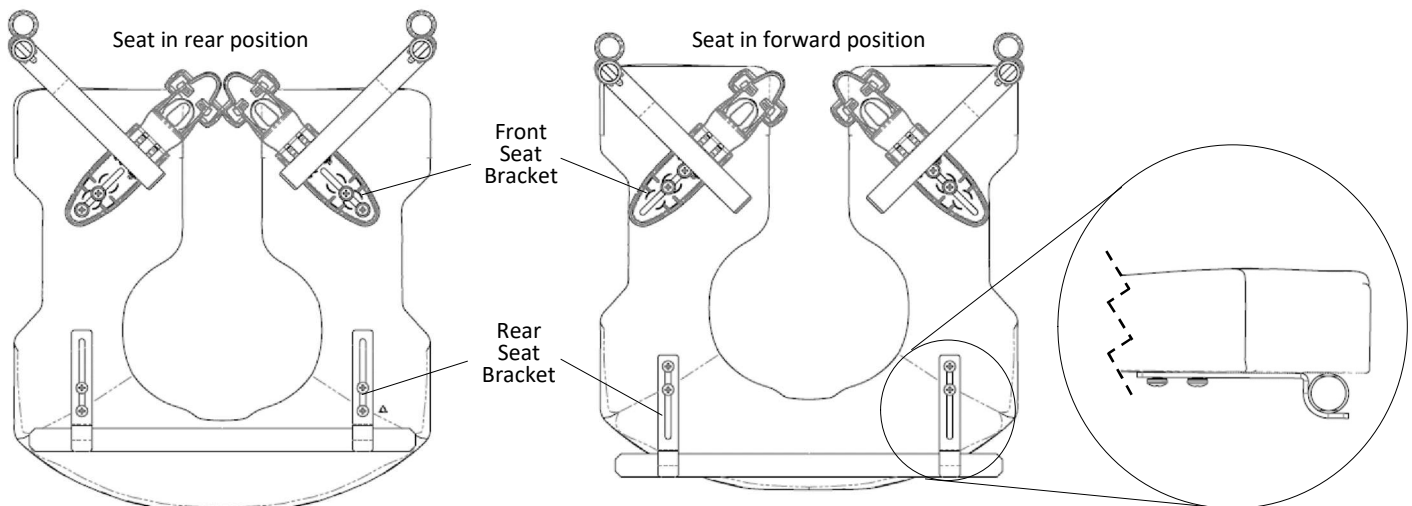


4. Reinstall the seat on frame, closing the front seat brackets around the front seat support tubes.
5. Slide/wiggle the seat to the desired position.
6. Ensure rear seat brackets are firmly positioned against the rear seat support tube.
7. Tighten all eight screws attaching the front and rear seat brackets to the seat to prevent further movement of the seat. *Note: Ensure the front and rear seat brackets are securely latched around the front and rear seat support tubes before allowing a user to transfer into the chair.*

2.6 Adjustable Foot Supports


2.6.1 Foot Support Installation

1. Remove the foot supports from the inner accessory box.
2. Place the foot support hanger tubes into the receivers, welded at the front of the chair frame. *If the support tubes are directed forward, the pins on the tubes will engage with grooves in the receivers and lock in place.*

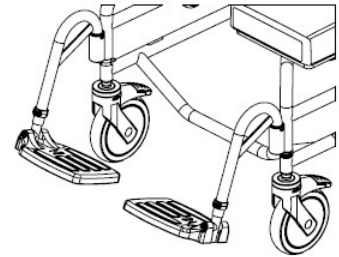


2.6.2 Foot Support Adjustment

1. Remove a plastic snap-pin from one foot support hanger tube.
2. Adjust the footplate extension tube vertically to achieve the desired height in the foot support hanger tube.
3. Insert the snap-pin through the foot support hanger tube and the extension tube. Ensure that the snap-pin is completely through the tube and that the green plastic clip is snapped securely around the outside of the hanger tube.
4. Repeat steps 1 to 3 for the other footplate

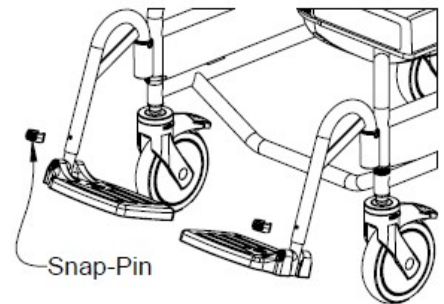

2.7 DEALER USE ONLY - Fastener Installation


All fasteners should be installed securely. Locknuts that are removed for any reason may need to be replaced rather than re-used. Check the performance of nyloc nuts when re-attaching to the screw. There should be significant detectable resistance when tightening. If not, replace the nyloc nut with a new one. It is advisable to check annually that all fasteners are secure.

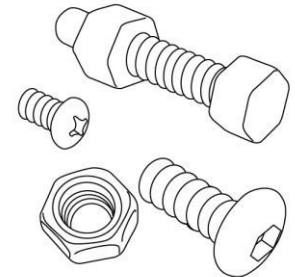

3.0 USE AND OPERATION

3.1 Flip-up Arm Supports

The arm supports can flip up to allow for ease of transfer, and lock automatically (if the optional lock is included) when flipped down.

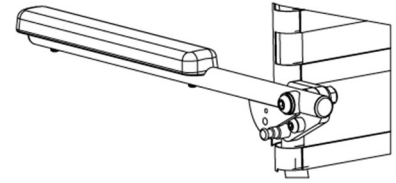


3.2 Adjustable-Tension Back Upholstery

The Multi-Position back support comes with an Adjustable-Tension Back Upholstery that provides trunk support for optimal positioning and comfort. The upholstery is removable for machine washing.


To install the Adjustable Tension Back Upholstery:

1. Place the fabric against the front of the back support canes making sure that when wrapped around, the clips on the straps face away from the fabric and the loops point downwards.
2. The first (1) and second (2) straps are positioned above the crossbar.
3. The third (3), fourth (4), and fifth (5) straps are positioned between the crossbar and arm support mounting plates.
4. The sixth (6) strap is positioned below the arm support mounting plates.
5. Adjust all of the straps to meet the user's needs.

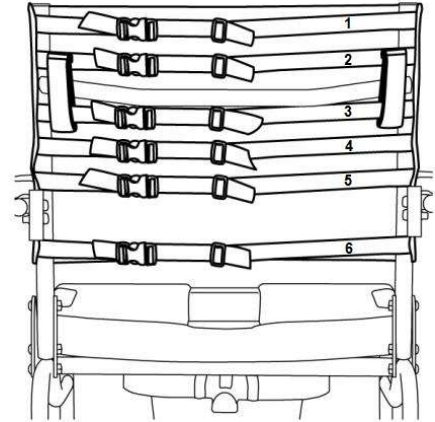

In order to adjust the back upholstery, each strap can be tightened or loosened in the buckles to achieve a wide range of positions. For example, the fourth (4) and fifth (5) straps can be tightened to create more pronounced support in the lumbar area of the back.


To remove the Adjustable-Tension Back Upholstery, release the buckles on the straps.

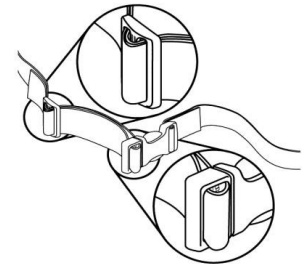

3.3 Raz Seats

To install a Raz Seat:

1. Ensure that the front spring brackets are in the open position. To open the front brackets, squeeze to unlatch.
2. Slide the rear of the seat over the rear cross tubes as the front of the seat is lowered onto the frame. Check to make sure that the rear seat brackets hook below the cross tubes.
3. Continue lowering the front of the seat until the front seat brackets nestle onto the front seat support tubes.
4. Secure the seat in place by closing the front seat brackets. To close the seat bracket, squeeze the clip and close the bracket around the front support tubes.
5. Reverse steps 1 to 4 to remove the seat from the frame.

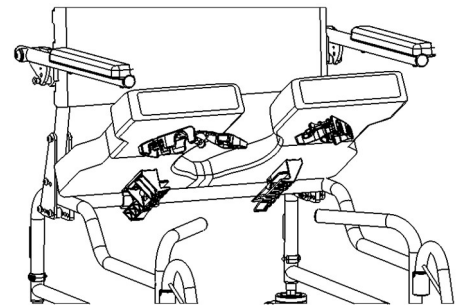

IMPORTANT !

NEVER ATTEMPT TO CHANGE THE SEAT HEIGHT WITHOUT THE HELP OF A QUALIFIED DEALER. HIGHER SEAT POSITIONS WILL REDUCE THE CHAIR'S STABILITY AND MAY RESULT IN TIPPING AND INJURY.

IMPORTANT !

FRAME AND SEAT ADJUSTMENTS SHOULD BE PERFORMED ONLY BY TECHNICIANS FROM QUALIFIED RAZ DEALERS. NEVER ATTEMPT TO CHANGE THE FRAME ANGLE BY CHANGING THE CASTER POSITION. THE FRAME SHOULD ALWAYS BE LEVEL. IMPROPER CASTER POSITIONS MAY REDUCE THE CHAIR'S STABILITY AND RESULT IN TIPPING. THIS HAS THE POTENTIAL TO CAUSE SERIOUS HARM TO THE USER AND/OR DAMAGE TO THE CHAIR.

3.4 Adjustable Foot Supports (Footrests)

Adjustable Footrests are standard on all Raz Mobile Shower Commode Chairs. For transfers, the footrests can be flipped up, rotated away, or removed entirely. Adjustable Footrests can be extended for users with longer legs with the optional footrest extension tube, a 2" longer tube that can be ordered for any Raz Mobile Shower Commode Chair.

To insert the Adjustable Footrests:

1. Place the footrest hanger tubes into the footrest receivers.
2. If the hanger tubes are aligned forward, the pins on the tubes will engage with grooves in the receivers and lock in place.


To adjust the length of the Adjustable Footrests:

1. Remove the snap-pin from one footrest hanger tube.
2. Reposition the footplate to a length suitable for the user.
3. Insert the snap-pin through the footrest hanger tube and through the inner tube.

To rotate the Adjustable Footrests:


1. Lift the footrest hanger tubes to disengage the pins.
2. Rotate the footrests outward or inward.

To remove the Adjustable Footrests, lift the footrests out of the receiving sleeves on the frame.

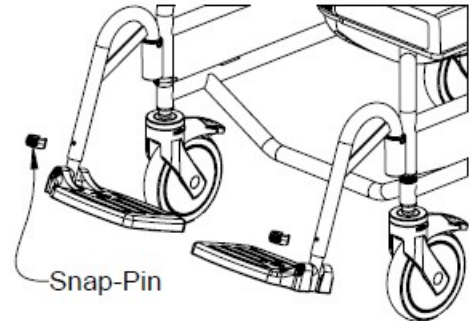

3.5 Wheel Locks – SP600 only


The Wheel locks on a Raz-SP600 can be engaged by pushing the handles forward. This stops the rear wheels from rotating. *For maximum stability, **BOTH** wheel locks **MUST** be engaged.* To disengage the wheel locks, pull the handles backward.

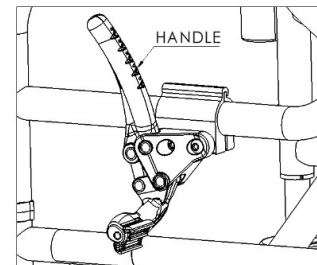

3.6 Commode Pan

The Raz Commode Pan is designed with an elongated shape that fits directly under the seat to minimize backsplash. A unique splash-reduction ridge is located at the center of the pan. The high gloss surface facilitates cleaning and rinsing, while the pouring spout and handle facilitate emptying. Removal of the Commode Pan is achieved by sliding the pan rearward.

NOTE: When re-inserting the pan, ensure that the pan is guided into the green plastic brackets and pushed forward until it hits the stops.

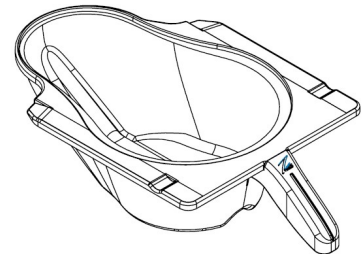

3.7 Casters

Each Raz Mobile Shower Commode Chair caster is equipped with a dual-lock feature, which stops the caster from swiveling and rolling simultaneously. To activate the dual-lock, step on the end of the caster brake lever until it latches in the "on" position. To deactivate the dual-lock, step on the raised end of the lever until it releases.



IMPORTANT !

A QUALIFIED RAZ DEALER SHOULD BE CONTACTED TO CHECK ALL FASTENERS, CASTER AND WHEEL LOCKS, HARDWARE, AND ALL OTHER MOVING COMPONENTS AT LEAST ONCE PER YEAR.

4.0 CLEANING AND MAINTENANCE

4.1 Cleaning After Each Use

4.1.1 Commode Pan

1. Remove the commode pan and empty the contents.
2. Wash the pan with a multi-purpose disinfectant cleaning solution. Use a soft brush if needed.
3. Rinse well before storage or re-use.

NOTE: A soapy hot water wash followed by a disinfectant spray can be substituted for a multi-purpose disinfecting cleaning solution.

4.1.2 Seat

1. Spray with a multi-purpose disinfectant cleaner and scrub with a soft brush as required.
2. Rinse with a water spray before storage or re-use.
DO NOT IMMERSE the seat in water or cleaning solutions.
3. For a more thorough cleaning, remove the seat from the Mobile Shower Commode Chair to allow better access to the seat's underside and around the seat's opening.

4.2 Cleaning As Needed

4.2.1 Adjustable-Tension Back Upholstery

1. Remove the plastic buckles and tri-glides from the back upholstery straps, paying attention to how the straps are wound through each component as they are removed.
2. Remove the back upholstery from the back frame and machine wash with a mild detergent in warm water on a normal or gentle wash cycle. Include other strap accessories such as the H-strap, and pelvic and chest positioning straps.
3. Install the back upholstery and other positioning accessories on the chair and allow it to dry.
DO NOT dry the back upholstery in a clothes dryer or damage to the upholstery may occur.
4. Assemble all plastic buckles and tri-glides onto straps.
5. Adjust the straps to the desired tension.

4.2.2 Frame, Arm Supports, Adjustable Foot Supports, and Other Components

1. Spray the frame and components with a multi-purpose disinfectant cleaner, scrub with a soft brush, and rinse with water.
2. If necessary, spray the frame and components with a diluted (10 parts water to 1 part solution) calcium/lime remover (such as CLR), scrub with a soft brush, and rinse thoroughly with water.
DO NOT mix a calcium/lime removal solution with any other liquid or toxic fumes may result.
DO NOT use chlorine bleach on any Raz components.

It is recommended to the user that a qualified Raz dealer check over all fasteners and subassemblies on a continuing basis or if there is cause for concern about the chair's performance.

Several times each year the chair and its components should be wiped down with a diluted calcium/lime removal solution in order to reduce deposits, followed by a hot water rinse.

To reduce the risk of mildew buildup, the entire chair should be wiped down with a soft dry cloth after the final rinse and before storage or use.

4.3 Suggested Cleaning Products

Task	Recommended Products
General Cleaning	Antibacterial Detergent
Disinfectant Surface Cleaner	Oxiver TB (Virox Technologies Inc.)
Intermediate Level Disinfectant	SepteFX 7D-11 (Titan Worldwide Inc.)
Calcium and Lime Deterrent	CLR

IMPORTANT !

DO NOT USE ABRASIVE SCRUBBING POWDERS OR SCOURING PADS ON THE RAZ SHOWER COMMODE CHAIR.

DO NOT SUBMERGE THE RAZ MOBILE SHOWER COMMODE CHAIR IN WATER.

RINSE THOROUGHLY AFTER CLEANING TO ENSURE ANY SOAP OR DETERGENT RESIDUE IS REMOVED.

DO NOT USE CLEANING PRODUCTS WITHOUT CONSULTING THE PRODUCT'S INSTRUCTIONS AND TAKING APPROPRIATE PRECAUTIONS FOR HUMAN EXPOSURE TO CHEMICALS.

5.0 INCIDENT REPORTING

IMPORTANT !

If any serious incident occurs in relation to this device, meaning any event that has led, or could lead, to death, serious injury, or serious deterioration in health, it must be reported without delay to:

- **The manufacturer (contact details provided in this manual), and**
- **The competent authority or appropriate regulatory authority in the country where the user or patient is located.**

6.0 LIMITED WARRANTY

This warranty is extended only to the original purchaser/user for Raz Mobile Shower Commode Chairs that have been purchased from a qualified Raz dealer.

This warranty gives you specific legal rights, but you may have additional legal rights depending on your region and country.

This warranty shall be extended to comply with state/provincial laws and requirements.

With regards to the original purchaser/user only, Raz Design warrants its base and back frame components to be free of defects in materials and workmanship for a period of two (2) years from the date of purchase. All other components on the Raz Mobile Shower Commode Chair are covered for a period of one (1) year and are subject to normal wear and tear exclusions. If within such warranty period any such product shall be proven to be defective, the part will be repaired or replaced, at Raz Design's discretion. This warranty does not include any labor or shipping charges incurred in replacement, part installation, or repair of any such product.

For warranty service, please contact the dealer from whom you purchased your Raz Mobile Shower Commode Chair. In the event that you do not receive satisfactory warranty service, please contact Raz Design directly using the contact information located in either the beginning or the end of this manual. In your correspondence, please provide your dealer's name and address, the product type, the date of purchase, and the chair's serial number (on a grey label located on the chair frame), as well as the nature of the product issue. Do not return products to the manufacturer without prior authorization.

Limitations and Exclusions:

The foregoing warranty shall not apply to serial numbered products if the serial number has been removed or defaced, and to products subjected to negligence or an accident. Improper operation, maintenance, or storage may void the warranty coverage on the Raz Mobile Shower Commode Chair.

The warranty does not apply to products modified without Raz Design's express written consent. This includes, but is not limited to, modification through the use of unauthorized parts or attachments, products damaged by reason of repairs made to any component by an individual or individuals who are not employed by a qualified Raz dealer, or to a product damaged by circumstances beyond Raz Design's control. Only Raz Design will have the authority to determine whether or not the circumstances are eligible for warranty coverage. The warranty will not apply to problems arising from normal wear or failure to adhere to the instructions contained in this manual.

The foregoing warranty is exclusive and in lieu of any other warranties, whether express or implied, including the implied warranties of merchantability and fitness for a particular purpose. The sole remedy for violations of any warranty whatsoever will be limited to the repair or replacement of the defective product in compliance with the terms contained in this document.

The application of any implied warranty shall not extend beyond the duration of the express warranty provided herein. Raz Design will not be liable for any consequential or incidental damages to part or whole of a Raz Mobile Shower Commode Chair.

Raz Design Inc. frame and hardware material are made of stainless steel for which we offer a lifetime warranty against corrosion. Please be advised this lifetime warranty is only extended to the original purchaser/user of Raz Shower Chairs that have been purchased from a qualified Raz dealer. Failure to comply with proper cleaning instructions may cause corrosion to the frame thereby voiding this warranty. Additionally, all claims of corrosion are subject to review and a request may be made for the return of the device in question, for a thorough examination, before a replacement order can be processed.

7.0 CONTACTS

It is important that the Raz Mobile Shower Commode Chair be properly assembled and all adjustments be made carefully. Up-to-date manuals can be downloaded from www.razdesigninc.com. For clarification of any section of this manual, contact the Canadian distributor or manufacturer.



MANUFACTURER

Raz Design Inc.
135 Rainside Rd. Toronto, ON, Canada, M3A 1B7
877.720.5678 / +1.416.751.5678
info@razdesigninc.com



IMPORTANT !

PRODUCTS THAT CAN NO LONGER BE USED ARE TO BE DISPOSED OF SEPARATELY FROM HOUSEHOLD WASTE. THIS MUST BE DONE ACCORDING TO THE LOCAL AND NATIONAL REGULATIONS FOR ENVIRONMENTAL PROTECTION AND RAW MATERIAL RECYCLING. PLEASE LOOK AT YOUR LOCAL GOVERNMENT WEBSITE FOR FURTHER INFORMATION ON THE CORRECT DISPOSAL PROCESS.

IF IT IS EVER FELT THAT ANY ASPECT OF THE RAZ SHOWER CHAIR IS IN NEED OF MAINTENANCE, CONTACT YOUR DEALER. ANY PROBLEMS THAT COULD AFFECT THE SAFE USAGE OF THE CHAIR MUST BE ATTENDED TO IMMEDIATELY. THE DEALER THAT PROVIDED THE SHOWER CHAIR MUST BE CONTACTED SO THAT REPAIRS CAN BE MADE PRIOR TO USING THE CHAIR. IT MUST BE MADE CLEAR TO THE DEALER THAT THE SHOWER CHAIR IS IN NEED OF MAINTENANCE AND IS UNAVAILABLE FOR USE UNTIL REPAIRS HAVE BEEN UNDERTAKEN AND ALL PROBLEMS RESOLVED.

IF FOR ANY REASON, YOUR DEALER DOES NOT RESPOND TO YOUR SATISFACTION, PLEASE CONTACT RAZ DESIGN:

BY EMAIL	info@razdesigninc.com
BY PHONE	877.720.5678 (North America) +1.416.751.5678 (Rest of World)